

# Rock Band Stealth Kit Installation Instructions

## Contents of Kit

Four Stealth Drum Pads  
Support Foam  
Two Support Struts

## Tools Needed

Small Screwdriver  
Needle Nose Pliers (optional)  
Rubbing Alcohol (optional)  
Petroleum Jelly (optional)  
Glue (optional)

## Step 1 - Remove the Stock Drum Pads

Remove the stock drum pads by gently, yet firmly, pulling around the rim of each pad, as shown below in figure 1.



Figure 1

This step can be difficult, but turning the drum upside down and pressing on the rubber mounts from below with a screwdriver (as shown below in figure 2) can make removal easier.



Figure 2

Next, unplug each pad from the stock connection point, as shown below in figure 3. Some kits have glue on the stock connection, which may make this process difficult. Applying some rubbing alcohol (or equivalent solvent) to the glue for a few minutes will help to soften the glue and make removal easier. Using a needle nose pliers will also make unplugging the connector easier.

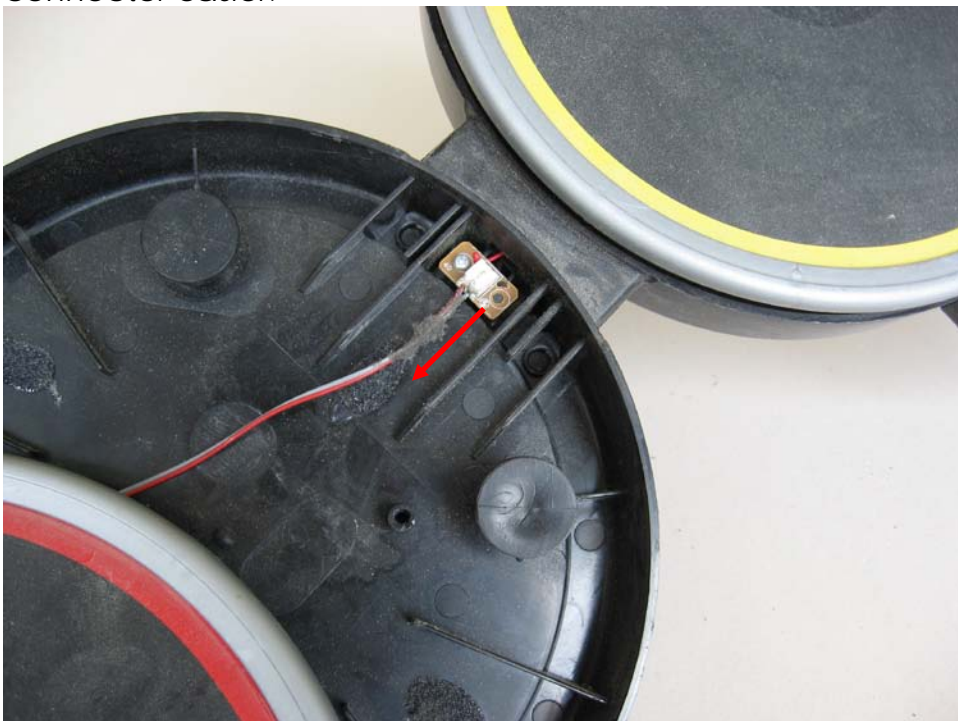


Figure 3

## Step 2 - Transfer the Mounting Brackets

Remove the four mounting brackets from the stock pads by removing the two screws that hold them in place, as shown below in figure 4. Install the mounting brackets onto the Stealth Drum Pads using the stock screws and the mounting pegs on the new pads.

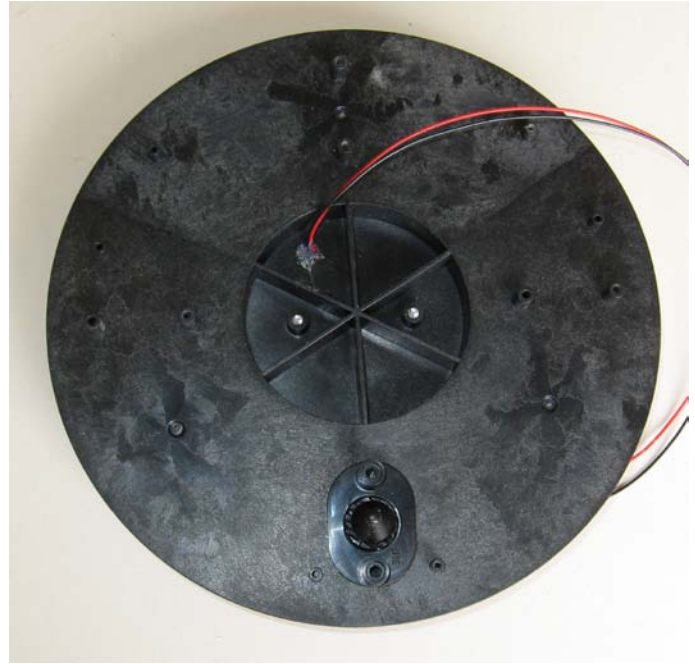
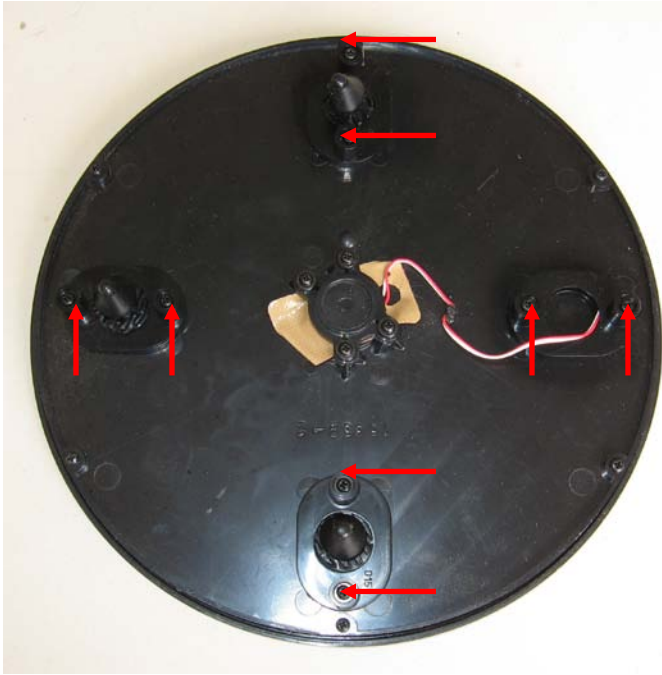



Figure 4

## Step 3 - Install the Stealth Pads

First, install the support foam by dividing the foam into 16 equal pieces and cutting it apart with a scissors, as shown below in figure 5. Install four pieces of foam (spaced equally) onto the stock drum base, under each pad. If necessary, glue can be used to hold the foam in place. **This step is very important. Your heads may not function properly without the support foam!**



Figure 5

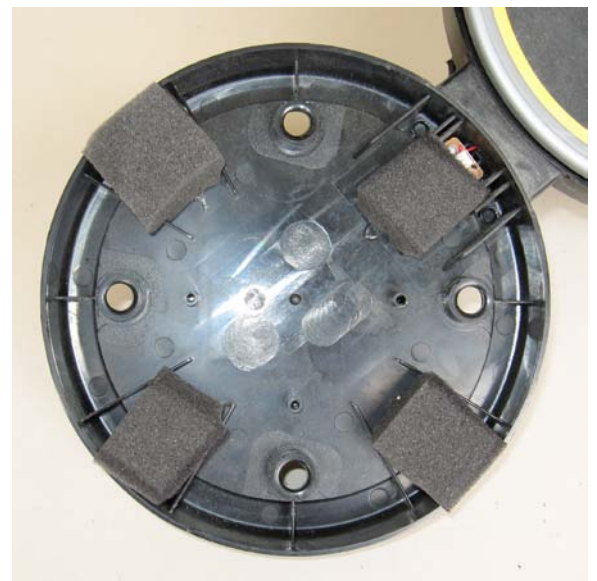

Next, plug the connector from the Stealth Pad into the stock connector socket, as shown below in figure 6. Align the rubber mounts with the holes in the stock kit and push them into place. If this step seems difficult, apply some petroleum jelly to the rubber mounts to lubricate them. Next, turn the drum upside-down on a stable surface. With the drum upside-down, push down gently from the back of the drum to push the mounts into place.



Figure 6

If the mounts still do not pop into place, use a needle nose pliers to gently pull them through the mounting holes, as shown below in figure 7.



Figure 7

#### **Step 4 - Install the Support Struts**

Install the support struts under the red and green pads according to the label on each strut. Place the concave end of the strut onto the main support leg just above the ring, as shown below in figure 8.



Figure 8

Finally, snap the beveled end of the strut into place under the bottom rim of the drum pad, as shown below in figure 9. The fit is made to be tight, so a little force may be needed.



Figure 9

#### **Notes:**

- Once installation is complete, be sure to re-calibrate your drum if needed.
- If you have any questions, see our website ([www.goodwoodmods.com](http://www.goodwoodmods.com)) for more info, or contact us at [support@goodwoodmods.com](mailto:support@goodwoodmods.com)